



Product Information

Pneumatic grips type 8297 / F8297, Fmax 2.5 kN

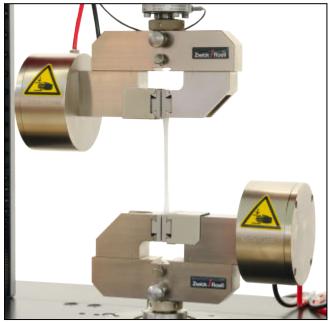

Pneumatic grips type 8297 Fmax 2,5 kN, opposing jaw with stepped adjustment

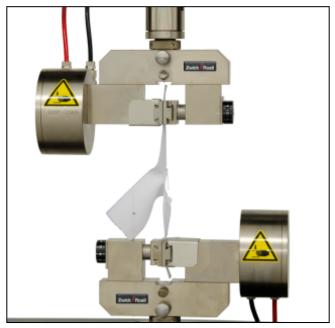

Pneumatic grips type 8297 Fmax 2,5 kN, opposing jaw with stepless and stepped adjustment

Applications

CTA: 97751 99520

- Specimen material:
 Metal, plastics, textiles, paper, fleece, elastomers, wood, insulation
- Specimen shape:
 Round and flat specimens, asymmetrical specimens
- Type of loading: Tensile, compression, alternating load

Function description

The pneumatic grip is a single action grip and can be used for symmetrical and asymmetrical gripping.

The gripping pressure for the specimen grip can be set steplessly and reproducibly via a pneumatic control unit and optionally via the testXpert III testing software. The specimen is held securely and jaw breaks are prevented during the test.

The specimen grip is opened and closed via buttons on the testing machine. The optional foot pedal unit or machine remote control can be used for additional operating convenience.

The opposing jaw varies according to type:

- stepped adjustment: fixed mounting, can be adjusted in 1mm steps (tool required)
- stepped and stepless adjustment: adjustment via screw drive, additionally adjustable in 1mm steps by means of a tool.

Advantages and features

- Constant pneumatic pressure allows even specimens prone to shrinkage to be held securely.
- Constant gripping force enables repeatable test results to be achieved.
- The jaws can be changed quickly and easily for different applications - no tools required. The jaws are centered automatically.
- Precise test results combined with high number of cycles achieved through centric insertion of specimen using easily adjustable centering stop.
- Adjustable opposing jaw for fast, easy testing, including joined (asymmetrical) specimens
- Ergonomic, open design for fast, easy specimen insertion and clamping



Product Information

Pneumatic grips type 8297 / F8297, Fmax 2.5 kN

Differentiation in two versions Pneumatic closing and gripping

• For specimen grips that close with pure pneumatic actuation, the closing motion only occurs as long as the closing button is activated. If the button is released during the closing process, the specimen grip automatically switches back to the safe, open position. The position is only held after the specimen grips are fully closed. The preset gripping pressure is only applied once the test starts. All pneumatic grips are available in this version.

Spring-closing and pneumatic gripping

Spring-closing specimen grips feature a technological difference between closing and gripping. With a brief touch of the closing button, the built-in spring closes the specimen grips very quickly with a low force of < 150 N. The specimen is therefore quickly clamped and operating times are reduced. The preselected gripping pressure is applied when the test starts. Seven selected specimen grips in a force range ≤ 2.5 kN are available in this version.

Technical data

Item No.	1106786 ¹⁾	1106830 ¹⁾	1106787 ¹⁾	
Туре	8297	F8297	8297	
Operating principle/identification	Opposing jaw with stepped adjustment	Opposing jaw with stepped adjustment	Opposing jaw with stepped and stepless adjustment	
Test load F _{max}	2.5	2.5	2.5	kN
Operating pressure	0.5 10	0.5 10	0.5 10	bar
The operating pressure depends on the upstream components.				
Gripping force at 6 bar	3.6	3.6	3.6	kN
Gripping force at 10 bar	6	6	6	kN
Opening width with jaws, 5 mm thickness	20 ²⁾	20 ²⁾	20 ²⁾	mm
Gripping travel of pneumatically operated side	12	12		mm
Gripping of the specimen	The specimen must be gripped with at least 2/3 of the jaw height.			
Dimensions				
Height	95	95	95	mm
Installation height	135	135	135	mm
Width	238	238	243	mm
Depth	110	110	110	mm
Depthwith connection unit	136	136	136	mm
Connection, hole	Ø 20	Ø 20	Ø 20	mm
Weight per specimen grip, approx.	2.4	2.4	2.5	kg
Ambient temperature	+10 +35	+10 +35	+10 +35	°C
Scope of delivery	2	2	2	piece(s)
Gripping travelof pneumatically operated side			12	


¹⁾ When working with optical extensometers, you must ensure that the area to be measured is not covered by the pneumatic actuator.


²⁾ The opening width is the result of using jaw inserts with 5 mm jaw thickness.



Product Information

Pneumatic grips type 8297 / F8297, Fmax 2.5 kN

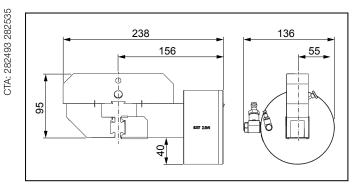

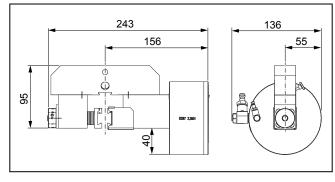

Pneumatic grip, dimensions

Pneumatic grip, dimensions

Accessories required

Pneumatic hoses (1x required)

Description	ArticleNumber
Set of pneumatic hoses for connecting a pair of pneumatic grips; including hose guiding for strain	1112640
relief	

Pneumatic control unit

Optional accessories

See section 4.6 Accessories

Jaws

Type 8287 or type 8487

Centering stop and Insertion aid

Description	ArticleNumber
Centering stops for centered clamping of flat and round specimens (0 - 60 mm), adjustable to scale. Scope of delivery: 2 pieces	316355
Insertion aid for centered clamping of ropes/wire/threads. Can only be used with jaws with max. height 30 mm. Scope of delivery: 2 pieces	316443

Spacer

Description	ArticleNumber
Spacers, 20 mm, for increasing the free space between clamping zone and grip body. Scope of	316559
delivery: 2 pieces	

Pressure amplifier

Description	ArticleNumber
Pressure amplifier for increasing operating pressure, max. input pressure 10 bar, pressure ratio 1:2, flow rate 900l/min, output pressure 2 - 10 bar. For installation in control unit line.	315016
Pressure amplifier for increasing operating pressure, max. input pressure 10 bar, pressure ratio 1:2, flow rate 400l/min, output pressure 2 - 20 bar. For installation in control unit line.	315018